


ADVANCED/WIRELESS - QUICK START GUIDE

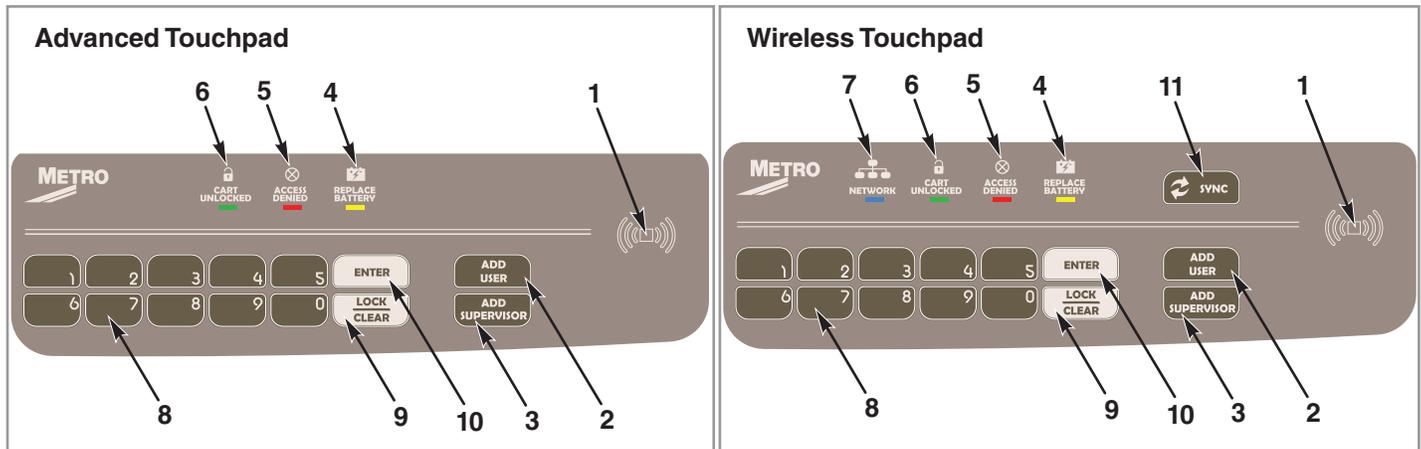

Touchpads for Advanced and Wireless Models:

- | | |
|--|--|
| 1. Proximity Card Reader scan area (If equipped) | 7. Network activity indicator (blue LED) |
| 2. "Add User" button | 8. Numeric keypad |
| 3. "Add Supervisor" button | 9. "LOCK/CLEAR" button |
| 4. Replace battery indicator (yellow LED) | 10. "ENTER" button |
| 5. Access Denied indicator (red LED) | 11. "SYNC" button |
| 6. Unlocked Cart indicator (green LED) | |

Carts arrive with 2 pre-programmed codes. The following is a review of each:

- The default supervisor code is **1350**. Supervisor credentials unlock the cart and can add or delete users and other supervisors.
- The default user code is **0531**. User credentials can only unlock the cart.

Unlocking the Cart using the Touchpad or the Card Reader:

PIN CREDENTIAL:

1. Enter a valid PIN (between 4 - 14 digits).
 2. Press "ENTER."
- If the code is VALID, system will automatically unlock unit.
 - If the code is INVALID, system will not unlock unit (red LED indicator on keypad (callout 5) will blink 3 times and 3 beeps will be heard). Re-enter correct code.
 - If enabled, the Access Denied mode will be triggered if a certain number of INVALID CODES are entered within a set number of minutes. If the Access Denied mode is activated, the unit will lock out the touchpad for a set number of minutes, and no access will be granted via the touchpad until the timeout has expired. A valid card credential will still be accepted. The settings for the Access Denied are accessed via the LockView software.

CARD CREDENTIAL:

If the electronic lock is equipped with a card reader (HID Proximity or HID iCLASS, iClass SE or iClass Seos):

1. Present a valid card within range of the proximity card reader.

DUAL CREDENTIAL:

If the User or Supervisor requires a dual credential:

1. Enter a valid PIN and press "ENTER" (for touchpad credentials) or present a valid card (for HID Proximity or HID iCLASS, iClass SE or iClass Seos credentials).
2. Enter the second credential (4-14 digit PIN) and press "ENTER."

NOTE: The second credential must always be a 4 - 14 digit pin.

To Relock the Cart using the Touchpad:

1. The carts are equipped with AUTO RE-LOCK, the cart will lock automatically when the specified time elapses.
2. To re-lock before time limit expires, press LOCK/CLEAR button.

NOTE: The default AUTO RE-LOCK time is 5 minutes. AUTO RE-LOCK settings are adjustable via the LOCKVIEW software and this feature can be disabled. Consult with your supervisor if there any questions about AUTO RE-LOCK settings.

Unlocking the Cart using the Override Key Lock:

1. Insert the key into the mechanical key lock and turn clockwise.
2. To open, pull out drawer to access.

To Relock the Cart using the Override Key Lock:

1. To close, push in drawer.
2. Turn the key in a counter-clockwise direction.

Replacement of Batteries:

The touchpad is powered by a battery pack of **6 Non-Rechargeable Alkaline D-Cell batteries (1.5V)** and need to be replaced on an **annual basis**. A yellow LED (**callout 4**) will illuminate when batteries need to be replaced. The battery pack is located underneath the cart on a slide out battery tray. Pull down on the spring-loaded tray lock pins and slide the tray toward you. The batteries are contained in a light gray cartridge. Slide the locking tab to allow the cartridge to tilt up and out.

Save this document for future application, load rating and/or safety reference.

US/Can: 1.800.992.1776
Corporate Headquarters (US): 1.570.825.2741
For Inquiries Outside of the U.S. and Canada, Visit www.metro.com/contactus

www.metro.com

