
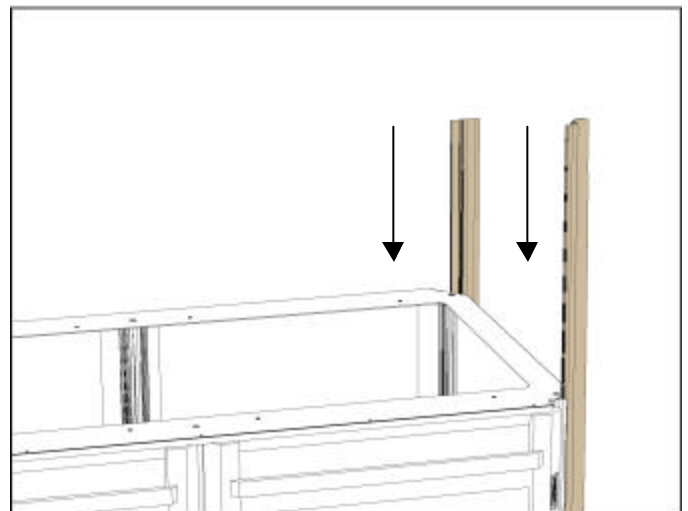



### Filler Kit - Side to Wall

1. Level base unit in position for installation, remove wall mounting bracket.
2. Remove filler strips from posts and replace with supplied plastic post extrusions. See back page. Trim excess as required.
3. Slide filler extrusions into place as shown on back page Trim excess as required
4. Cut to length, align and mount the wall mount extrusions (Qty. 2) to wall. See back page. Wall mounts can be secured with screws or double-sided adhesive tape. (Hardware is not included)
5. Align filler extrusion within the slot of the wall-mounted piece and the plastic extrusion within the aluminum post. See back page.
6. Reattach wall mounting bracket. Fasten to wall & attach countertop following the steps outlined in the Starsys WorkCenters Installation Manual. (Shipped in each base unit)

**Note:** Plastic extrusions can be trimmed, punched, or drilled to accommodate utilities as needed.

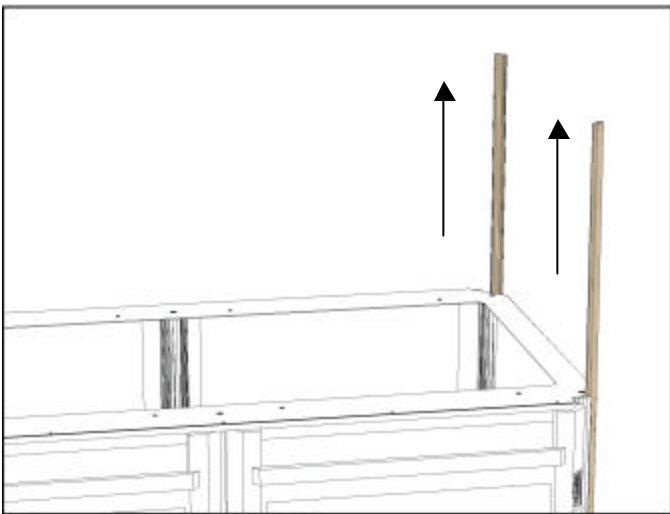

PLAN VIEW

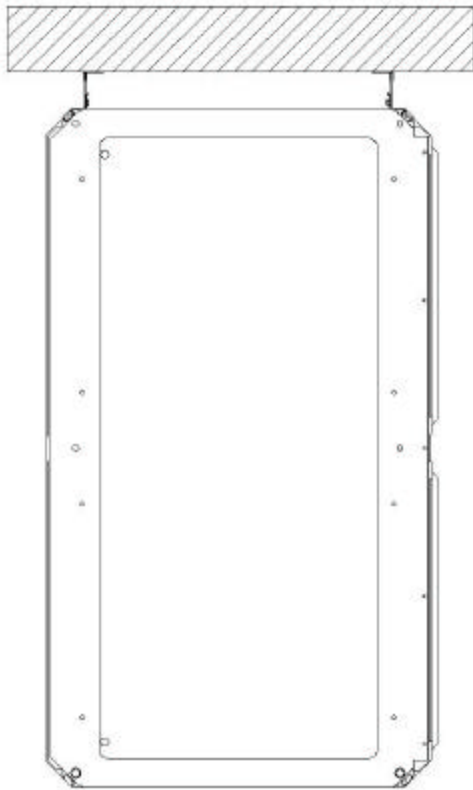

DETAILED VIEW

