


Double Wide Base Filler Kit

1. This kit is to be used to fill in the gap at each end of the base.
2. The kit contains (2) filler brackets and (4) #10 screws.
3. Before securing the unit in place, position the filler bracket under the side panel, aligning the slots in the bracket with the holes in the metal side panel cap. Affix with the supplied screws. Repeat for opposite end.
4. Securing unit to wall

**(2) #10
Screws**

Side panel

**Filler
Bracket**

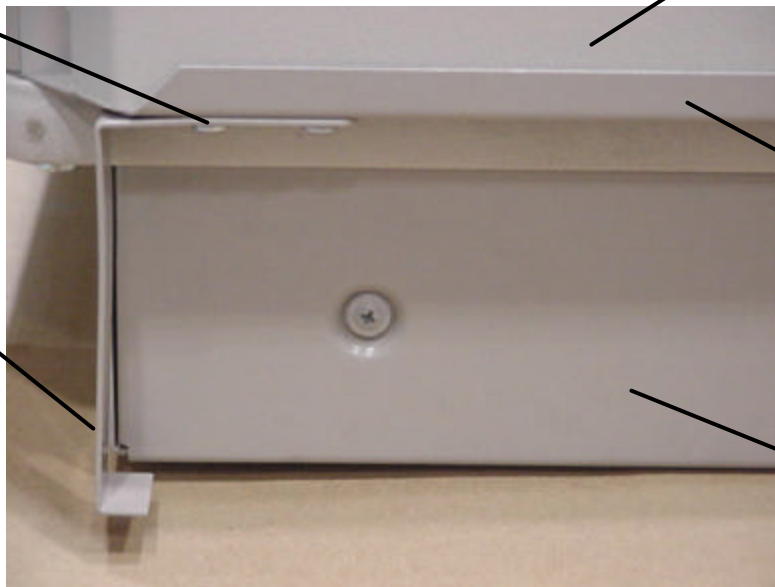

**Metal side
panel cap**

Base