


# Assembly Instructions For Pan Dolly Handles

## DH 2020 DOLLY AND DH 2040 DOLLY

1. Invert the dolly and position on bench or table as shown in illustration.
2. On nearest two casters remove the inside two nuts and lockwashers from the  $\frac{3}{4}$ " long bolts **(Do not remove the bolts)**.
3. Position the handle with the short ends up. Place two handle clamps, with the flat side of the clamp facing down and away from the center of the handle, on each handle end.
4. Guide the bolts through the handle clamps and replace the lockwashers and nuts. Secure the nuts tightly.

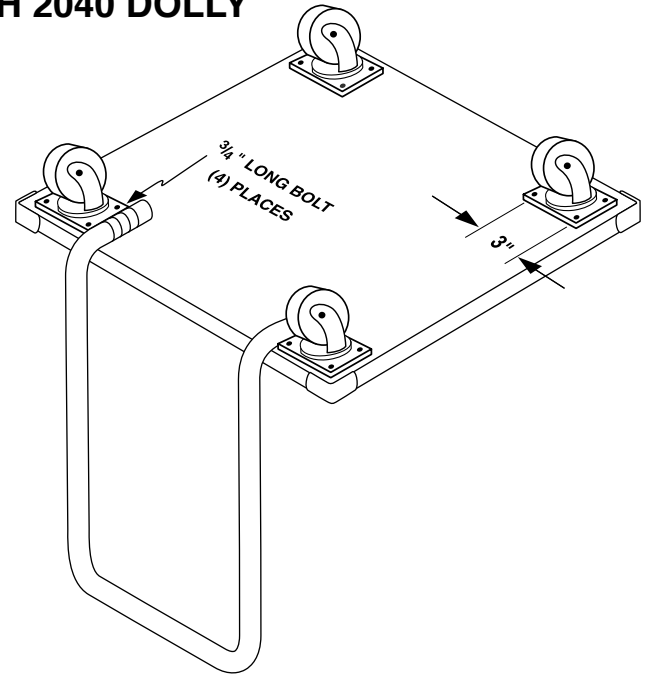

### InterMetro Industries Corporation

North Washington Street  
Wilkes-Barre, PA 18705  
(570) 825-2741

L01-047

Information and specifications are subject to change without notice. Please confirm at time of order.