



Item# _____

Job _____



Top-Track™ qwikSLOT™ High-Density Storage System

11.14



TOP TRACK™ qwikSLOT™ HIGH DENSITY STORAGE SYSTEM

- **High-Density/Cost-Effective Storage:** Mobile units are positioned between stationary units, and only a single aisle, which can be opened between any two units as needed, is required. This efficient utilization of space addresses the storage needs of growing operations, and may eliminate the need for facility expansion.
- **Easy Assembly/Cost-Saving Installation:** Units are easily assembled using the unique Super Erecta Shelf® and Super Erecta qwikSLOT methods. Installation of the overhead track does not require shimming, drilling or bolting to the floor, as do most "floor-mounted" systems, saving time and money.
- **Versatile:** The modular Super Erecta Shelf® and Super Erecta qwikSLOT systems offer shelves of various widths and lengths to fit any size room or area.
- **Sanitary:** Rollers guided by overhead track eliminate dirt and debris accumulation and other

sanitation problems often associated with floor-mounted track systems. Absence of track on floor, combined with lateral movement of mobile units, allows for easier cleaning of floor area within the system.

- **Safe:** Overhead track system allows for unobstructed walking area within the system, eliminating potential safety hazards often caused by floor-mounted tracks.
- **Accessible:** Unobstructed floor area within the system promotes easy aisle access for utility carts, simplifying material handling tasks.
- **Fast Adjustability:** Super Erecta qwikSLOT shelving is one of the most flexible and adjustable shelving systems available. Incorporating the strength and attractive look of the Super Erecta design, Super Erecta qwikSLOT shelving is the easiest system to assemble and adjust. Designed to meet your changing needs, Top Track qwikSLOT allows you to maximize vertical storage density by allowing the addition, removal or adjustment of shelves easily, in seconds, at 1" (25mm) increments.
- **Accepts All Super Erecta Accessories.**
- **Aesthetic Super Erecta Brite Finish** – The look of chrome at less cost.



InterMetro Industries Corporation
North Washington Street
Wilkes-Barre, PA 18705




Job _____

TOP-TRACK™ qwikSLOT™ HIGH-DENSITY STORAGE SYSTEM




OVERHEAD VIEW

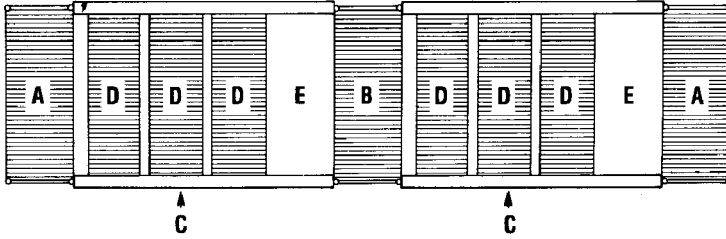

SYSTEM COMPONENTS

- A = Stationary End Units
- B = Stationary Intermediate Unit (Optional)
- C = Track Set
- D = Mobile Units
- E = Open Aisle

FRONT VIEW

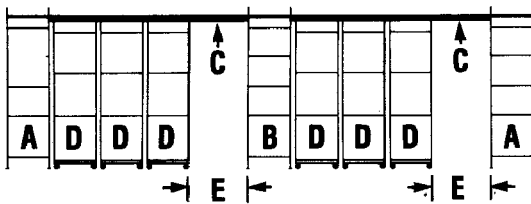

SPECIFICATIONS:

- **Track & Joining Channel:** Aluminum extrusion 6063-T6.
- **Roller Assembly:** 18-8 stainless steel hardware with nylon roller.
- **Casters:** For applications where zinc or chrome finishes are acceptable: 5" (127mm) polyolefin wheel with offset rigid horn, ball bearings in axle, nickel-plated, pre-lubricated.

DIMENSIONS:

Stationary End Unit Kits	Shelf Width		Chrome-Plated
	(in.)	(mm)	
Includes hardware necessary for connecting stationary end units to track. ONE KIT IS REQUIRED PER SINGLE SYSTEM. SHELVES AND POSTS SOLD SEPARATELY. 86" qwikSLOT posts required.	18	455	TTE3C
	21	530	TTE4C
	24	610	TTE5C
	*30	760	TTE6C
	*36	910	TTE7C

Stationary Intermediate Unit Kits	Shelf Width		Chrome-Plated
	(in.)	(mm)	
Includes hardware necessary for connecting intermediate unit to track on both sides. SHELVES AND POSTS SOLD SEPARATELY. 86" qwikSLOT posts required.	18	455	TTA3C
	21	530	TTA4C
	24	610	TTA5C
	*30	760	TTA6C
	*36	910	TTA7C

*qwikSLOT shelves are not available in these widths.

Track Sets	6'	7'	8'	9'	10'	11'	12'	13'
	(1830mm)	(2135mm)	(2440mm)	(2745mm)	(3050mm)	(3355mm)	(3660mm)	(3965mm)
Includes necessary sections of track for assembling track runs of 6'-21' (180mm-6405mm). For track sizes within the even 1-foot increments, round up to the next foot.	TTS6N	TTS7N	TTS8N	TTS9N	TTS10N	TTS11N	TTS12N	TTS13N
	14'	15'	16'	17'	18'	19'	20'	21'
	(4270mm)	(4575mm)	(4880mm)	(5185mm)	(5490mm)	(5795mm)	(6100mm)	(6405mm)
	TTS14N	TTS15N	TTS16N	TTS17N	TTS18N	TTS19N	TTS20N	TTS21N

Mobile Unit Kits	Shelf Width		Super Erecta Brite
	(in.)	(mm)	
One kit required per mobile unit. Kit includes posts, casters/caster channels, donut bumpers, roller bearing assemblies, push handles and aluminum split sleeves. SHELVES SOLD SEPARATELY.	18	455	TTM3AQBR
	21	530	TTM4AQBR
	24	610	TTM5AQBR

NOTES:

1. The stationary end and intermediate units **must** have a minimum of four Super Erecta shelves or two Super Erecta shelves and two 3-sided channel frames. Add qwikSLOT shelves as needed. The width of the stationary end and intermediate units should be equal to or greater than the width of the mobile units.
2. The Top-Track qwikSLOT system requires the use of 86" (2184mm) posts (i.e., 86PQ) on the stationary end and intermediate units. **Posts and shelves for the stationary end and intermediate units are sold separately.**
3. The mobile unit kit includes special 74" (1880mm) posts(74PQ) with casters. **Shelves for mobile units are sold separately.** Two Super Erecta shelves are required, one at top and one at bottom of mobile unit. Add qwikSLOT shelves as required.
4. Push handles with aluminum split sleeves must be installed on both sides of a mobile unit to maintain rigidity.
5. Recommended maximum load rating for a mobile unit is 900 lbs. (400 kg.). Floor should be level, smooth, and free from large cracks and raised obstacles. Maximum load rating for an individual qwikSLOT shelf is 300 lbs.
6. Under normal conditions, an aisle width of 30"-36" (762mm-914mm) is recommended. The storage of very large objects within the system, however, may require an aisle width larger than 36" (914mm).
7. A stationary intermediate unit is required when track length exceeds 21 feet (6401mm). A stationary intermediate unit may be used at the discretion of the user when track lengths are less than 21 feet (6401mm).
8. qwikSLOT locking clips (9985 QSL) must be used on each qwikSLOT shelf. Not included with shelves.

For Product Information, call 1-800-433-2232



InterMetro Industries Corporation
North Washington Street
Wilkes-Barre, PA 18705

L03-114
7/97 BJ

Printed in U.S.A.

Information and specifications are subject to change without notice. Please confirm at time of order.