



SmartWall Plus™

Finally, a complete wall storage system made easy. Posts and shelves, workspace management grids with accessories, and enclosed Starsys cabinets all attach to the SmartWall Plus wall tracks.

- Easy to lay out: Shelves, grids, and Starsys cabinets can be added wherever there is a wall track.
- Easy to install: Wall tracks are designed to interface with studs and other suitable wall surfaces. Simply attach the wall track to the wall and begin adding storage options.
- Easy to adapt: Storage options can easily be repositioned along the track before securing them to the wall to maximize storage space and improve organization.
- Easy to clean: The wall track's smooth surface can be quickly wiped clean. Shelves and grids can be easily removed to clean the walls.

Easy to Order

Step 1: Select wall tracks based on usable wall space. (Wall tracks include joining bar hardware and end stops.)

Step 2: For shelves


1. Select shelves — Super Erecta, MetroMax Q, MetroMax.
Note: To determine usable length for shelving, take the total length of the adjacent tracks and subtract 2 inches (51mm).
2. Select SmartWall Plus post assemblies and wire shelf supports. (Post assemblies include brackets to attach to track and the wall.)

For grids and accessories

1. Select grids.
2. Order one grid bracket kit (SWPGBRK) per grid.

For Starsys cabinets

1. Select single wide or double wide cabinets.
2. Order one cabinet bracket kit (SWP-SXSOHKIT) per single wide cabinet and two bracket kits per double wide.

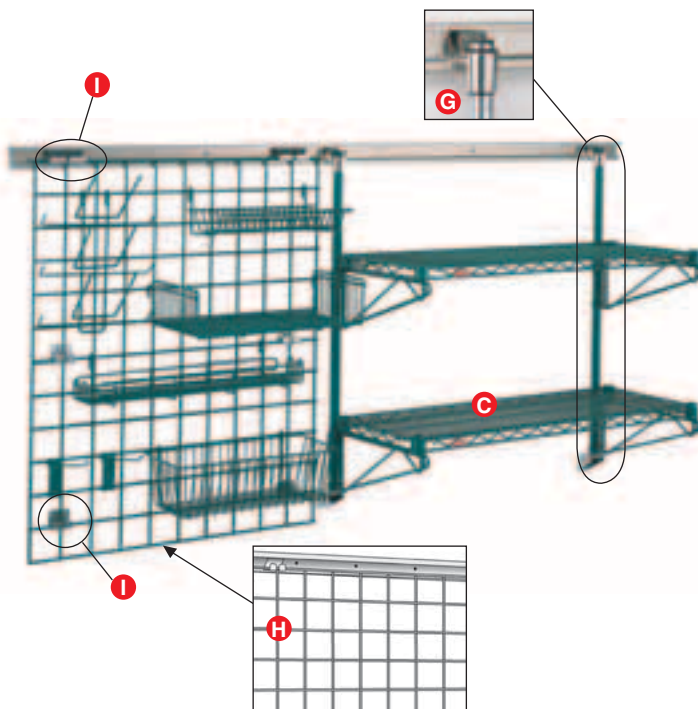

Metro Tip:

Build flexibility into new construction by laying out new rooms with wall tracks. Customized storage options and work space management tools can be added later as the purpose for the room is identified.



SmartWall Plus System

- A) Wall Track
- B) Cantilever wire shelf
- C) Super Erecta wire shelf
- D) MetroMax Q shelf
- E) MetroMax shelf
- F) Wire shelf support
- G) Post assembly (showing detail of top post bracket)
- H) Wire grid
- I) Grid Bracket (part of grid bracket kit: SWPGBRK)
- J) Starsys wall cabinet