



Item # _____

Job _____

ADJUSTABLE POLYMER “POKER CHIP” DISH DOLLY PCD SERIES

Adjustable:

- Metro’s Adjustable Poker Chip Dish Dolly is perfect for holding multiple size dishes — anything from small 4¹/₄-inch dishes to 11³/₄-inch dinner plates and platters.
- Easy one-handed adjustments on the underside of the dolly allows for flexibility and maximum loading density.

Maneuverable:

- Four recessed handles make it easy to maneuver in and out of tight areas and saves space. The compact design allows for maximum space utilization and convenient under counter storage.
- Four 5" (127mm) diameter swivel casters (two with brakes) with neoprene wheels provide for easy maneuverability and positioning.

Two-Handed Access:

- Unique design allows fast, safe and easy two-handed access to all dish columns. Minimize dish breakage and easily load and unload dishes.

Durable Construction:

- Sturdy polymer construction is extremely safe for dishes, easy to clean, and is resistant to cracking, peeling or chipping.

Sanitary:

- Dividers and tower are removable to facilitate cleaning.
- Smooth, rounded corners and seamless cart surfaces eliminate cracks and crevices and simplify cleaning.
- Built-in drain holes promote cleanability and eliminates the possibility of water build up.
- Dishes are stored 12" (305mm) above the floor surface, minimizing dust and water marks from floor dirt and splashing.
- Included translucent vinyl cover protects clean dishes from dust and water splashes while in storage and allows workers to view contents without removing the cover.
- NSF Listed.

Microban® Antimicrobial Product Protection:

- Cart body has built-in *Microban® Antimicrobial Product Protection which inhibits the growth of bacteria, mold, mildew, and fungi that cause odors, stains, and product degradation.



PCD11A



PCD11A

*MICROBAN® and the MICROBAN® symbol are registered trademarks of the Microban Products Company, Huntersville, NC.



InterMetro Industries Corporation
 North Washington Street
 Wilkes-Barre, PA 18705
 www.metro.com



Adjustable Polymer “Poker Chip” Dish Dolly PCD Series

16.21

Job _____



ADJUSTABLE POLYMER "POKER CHIP" DISH DOLLY PCD SERIES

Specifications

Material: High-density polymer containing Microban Antimicrobial product protection.


Construction: Seamless, molded polymer construction, equipped with handgrips on all four sides.

Casters: Four B5DN swivel casters (two with brakes). Ball bearing swivel; ball bearing axle. Nickel-plated, pre-lubricated casters with neoprene tires. Casters are bolted to an internal metal support plate.

Protective Cover: Standard heavy-duty 6-mil vinyl cover.

Standard Unit: Four dividers, center column and protective cover provided with each dolly.

Plate Sizes 5 1/2"-6 5/8"
8 Columns (40 Per)
*Capacity = 320

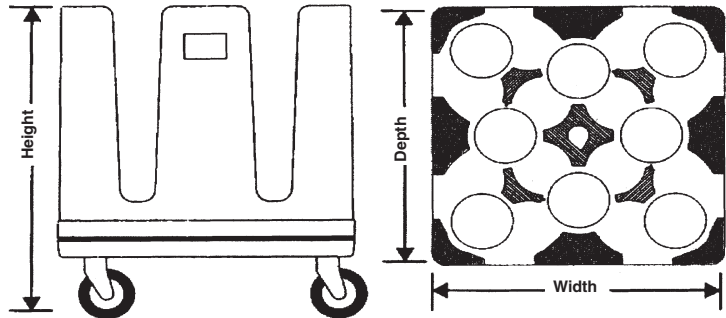

Dimensions

Model No.	Height		Width		Depth		Approx. Pkd. Wt.	
	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
PCD11A	31 15/16	812	26 5/8	677	26 5/8	677	65	30

Accessories

Model No.	Description
AD11A	4 Additional Dividers
PCDV11A	Additional Cover

**Loading capacity depends upon china shape and thickness. Usable column height is 20" (508mm).*

SAMPLE CONFIGURATIONS (Standard Unit)

Plate Sizes 6 1/2"-7 3/8"
8 Columns
*Capacity = 320

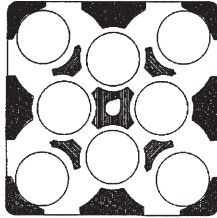


Plate Sizes 7 1/2"-8 1/2"
5 Columns (60 Per)
*Capacity = 300

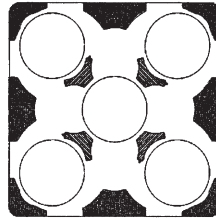


Plate Sizes 8 5/8"-9 1/2"
4 Columns (60 Per)
*Capacity = 240


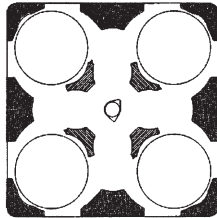


Plate Sizes 9 5/8"-11 3/4"
4 Columns (60 Per)
*Capacity = 240

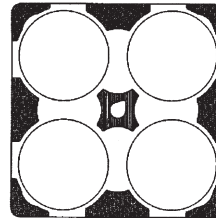

SAMPLE CONFIGURATIONS (Accessory Dividers Required)

Plate Sizes 4 1/4"-4 5/8"
16 Columns (40 Per)
*Capacity = 640



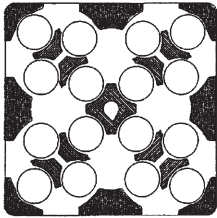



Plate Sizes 4 3/4"-5 3/8"
12 Columns (40 Per)
*Capacity = 480

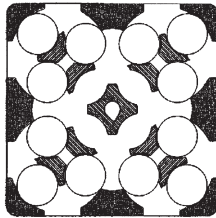

4 Columns (40 Per) 4 1/4"-4 5/8"
2 Columns (60 Per) 7 1/2"-9 1/2"
3 Columns (40 Per) 4 3/4"-5 3/8"

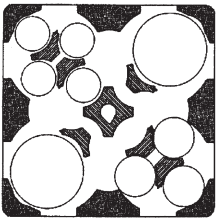

8 Columns (40 Per) 4 1/4"-4 5/8"
2 Columns (60 Per) 7 1/2"-9 1/2"

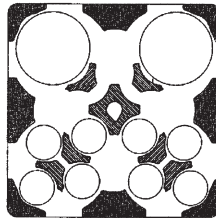

All Metro Catalog Sheets are available on our Web Site: www.metro.com



InterMetro Industries Corporation
North Washington Street, Wilkes-Barre, PA 18705
Phone: 570-825-2741 • Fax: 570-825-2852
For Product Information Call: 1-800-433-2232

L02-100A
Printed in U.S.A. Rev. 4/08
Information and specifications are subject to change without notice. Please confirm at time of order.
Copyright © 2008 InterMetro Industries Corp.