



We put space to work.

Item # _____

Job _____

PrepMate™ MultiStation

PrepMate is a multifunctional workstation designed around the operator to eliminate space constraints and increase overall productivity. Perform a multitude of tasks faster and more efficiently in a space saving footprint with a patent pending, multi-level work surface.

- **Multi-Level:** The PrepMate Multi-Rail design holds a standard 18"x24" cutting board* above standard food/steam table pans. The design increases work surface capacity by providing an easily accessible level of storage below the work surface. You'll increase productivity up to 20%** by allowing prepared food to be pushed into pans without wasting time and motion to pick-up and place it into pans. Plus, it reduces the scrap associated with that extra activity.
- **Multi-Height:** PrepMate is capable of 5 work surface heights (35¹/₈" – 39¹/₈") allowing the work station to be set-up for multiple employee heights and tasks.
- **Mobile & Stable:** Perform tasks in multiple locations and save time and labor transporting product. Four total-lock casters provide a stable work surface by locking both the caster wheel and the hub for maximum stability.
- **Task Specific:** Configurable to a multitude of tasks with labor & space saving accessories.
- **Easy to Clean:** Wipe down and disassemble without tools for sanitation.
- **Construction:** Based on Metro Super Erecta® commercial grade shelving systems with 1" shelf adjustability, 800 lbs. shelf load capacity, and unlimited configurations.
Construction options include:
 - Solid Stainless Steel Shelves
 - Solid Galvanized Steel Shelves
 - Super Erecta Pro® Hybrid Removable Mat Shelves
 - MetroSeal® 3 Epoxy Coated Wire Shelves
 - Brite Zinc Wire Shelves
- **Space Saving Design:** Available in 18"x24", 18"x30", 18"x36", & 18"x48" sizes to fit in the most space constrained environments.
- **Application Based:** Choose from pre-configured models based on the needs of your application.

NSF Patent Pending

** Testing completed by Pennsylvania State University Center for Food Innovation.

* Cutting Boards up to 18¹/₁₆" wide



Standard Height Adjustment.

MS1836-FSFS: 36" PrepMate with Solid Stainless Shelves

PrepMate Multi-Rail provides multi-level efficiency.



MS1836-FGBR: Solid Galvanized and Brite Wire Shelves

All Metro Catalog Sheets are available on our website: www.metro.com



InterMetro Industries Corporation
North Washington Street, Wilkes-Barre, PA 18705
Product Information. U.S. and Canada: 1.800.992.1776
Outside U.S. and Canada: www.metro.com/contactus

L02-213
Printed in U.S.A. 1/19

Information and specifications are subject to change without notice. Please confirm at time of order.

Copyright © 2019 InterMetro Industries Corp.



PrepMate™ MultiStation

17.50




We put space to work.

PrepMate™ MultiStation

Specifications

- **Multi-Rail Construction:** 16ga, Type 304 Stainless Steel, Removable without the use of tools, Glass Filled Nylon End Caps
- **Sizes:**

Nominal	Actual
18"x24"	= 19.4"x26" (493mm x 660mm)
18"x30"	= 19.4"x32" (493mm x 812mm)
18"x36"	= 19.4"x38" (493mm x 914mm)
18"x48"	= 19.4"x50" (493mm x 1270mm)
- **Posts:**
 Stainless Steel Posts come with FSFS units
 Metroseal Posts come with PR and NK units
 Chrome Posts come with FG and BR units
- **Height Adjustment:** Fixed with assembly. 35 1/8"–39 1/8" in 1" increments. Height is adjusted through no tool reassembly.

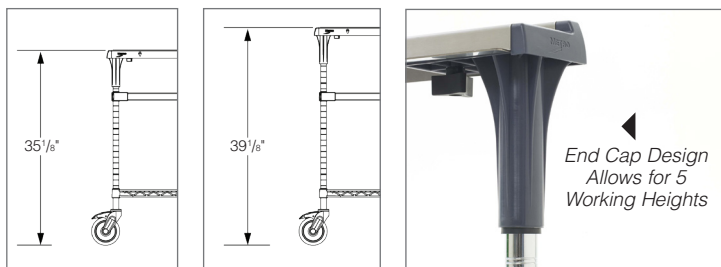

- **Caster Construction:** 5" Diameter Polyurethane Wheel, 3/8" Threaded Stem, Polyester Horn, Total Lock, NSF
- **Rail Grip:** Included with each unit, Rail Grips can be used to keep the cutting board from sliding on the rails
- **Load Rating:** Multi-Rails: 800 lbs. per set*; Shelving: 800 lbs. each; Casters: 220 lbs. each; Static System: 800 lbs.



* Multi-Rails are capable of holding 800 lbs. evenly distributed on an 18"x24" work surface of sufficient strength centered in the unit.

Other Accessories Available


- Cutting Board Holder
- Pan Holder
- Knife Holder
- Magic Ring (Fractional Pan Holder for Rails)

See PrepMate Accessory Spec Sheet 17.52 to learn more.

Configuring your PrepMate

Base Unit Model Numbers

(Base Models include Rails, Shelves, Post, & Casters all in one box)

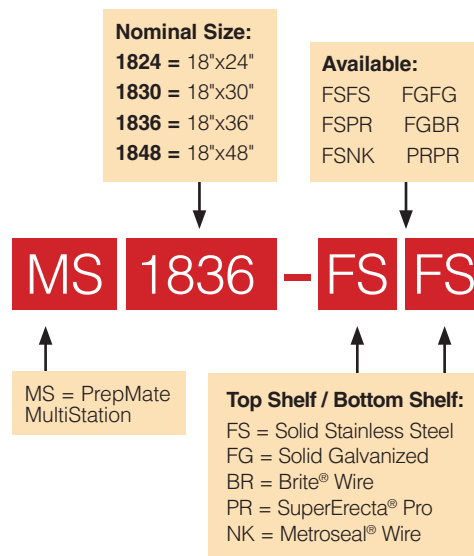

PrepMate Kit Model Numbers

(PrepMate Kits include Base Unit, (2) Magic Rings, and a Cutting Board all in one box)

